English Simple Manual (簡易英語版)

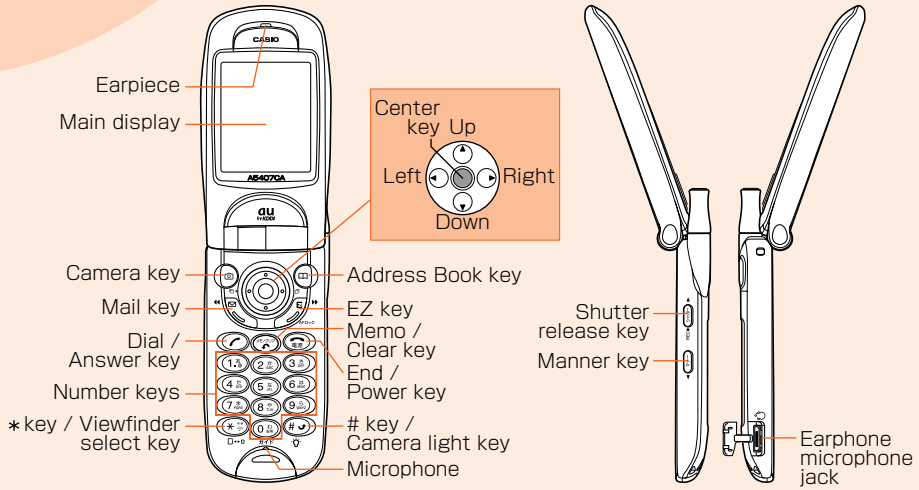

Turning Power On and Off

● Turning power on
Hold down ☎ for a few seconds.

● Turning power off
Hold down ☎ for at least one second.

Applying the Phone's Default Settings

From the stand-by screen: Press ●. ▶ Press 3.

Checking Your Own Phone Number

From the stand-by screen: Press ●. ▶ Press 0.

Placing and Answering a Call

● Placing a Call
From the stand-by screen: Enter the phone number you want to call.
▶ Press ✆.
To end a call: Press ☎.

● Answering a Call
When the phone starts ringing, press ✆.
To adjust the earpiece volume during a call: Use ↕.

Storing and Recalling an Address Book Data

● Storing Data
From the stand-by screen: Hold down 📖 for at least one second.
▶ Use ↕ to select the Address Book record you want to edit. ▶ Press ●[編集](Edit).
▶ Enter the data. ▶ Press 📖[登録](Store).

● Recalling Data
From the stand-by screen: Press 📖 to display the Hiragana Row Search screen.
▶ Use ✥ to select the hiragana row for the record you want.
▶ Use ↕ to select the name of the record.
▶ Press ●[表示](Display) to display the Address Book record screen.

Using the Camera (Movie and Snapshot)

● Recording a Movie Clip
From the stand-by screen: Hold down 📷 for at least one second.
▶ Press ●[録画](Record) or シャッター to start recording. ▶ Press 📖[終了](End).
▶ Press ●[保存](Store) to store the movie.
Pressing ●[II](Pause) during recording pauses recording.
Pressing 📷[フォト](Photo) in the Movie mode changes to the Photo mode.

If the phone is folded
From the stand-by screen: Hold down シャッター for at least one second.
▶ Press マナー[ムービー](Movie). ▶ Press シャッター to start recording.
▶ Press シャッター[一時停止](Pause) and then マナー[終了](End) to stop recording.
▶ Press シャッター[保存](Store) to store the movie.
Pressing マナー during recording cancels recording.

● Taking a Snapshot
From the stand-by screen: Press 📷(or hold down シャッター for at least one second).
▶ Press ●[シャッター](Shutter) or シャッター(Shutter) to record a snapshot.
▶ Press ●[保存](Store) to store the photo.
Pressing 📷[ムービー](Movie) in the Photo mode changes to the Movie mode.

If the phone is folded
From the stand-by screen: Hold down シャッター for at least one second.
▶ Press シャッター[撮影](Record) to record a snapshot.
▶ Press シャッター[保存](Store) to store the photo.

Making an International Call

Ex: To call 212-123-△△△△ in the USA

0 0 5 3 4 5 ▶ 1 ▶ 2 1 2 ▶ 1 2 3 ▶ △△△△ ▶ ✆

- 0 0 5 3 4 5: International access code
- 1: Country code (USA)
- 2 1 2: Area code
- 1 2 3 △△△△: Number you want to call

English Voice Mail Answering Messages

You can configure Voice Mail to play operation instructions and answering messages in English.
From the stand-by screen: Press ●. ▶Press 8. ▶Press 1. ▶Press 6. ▶Press ✆.

Other Handy Features

● Manner Mode
From the stand-by screen: Hold down マナー for at least one second.
Repeat the above operation to disable the Manner mode.

● Take A Message Feature (Voice Recording)
From the stand-by screen: Hold down ボイスメール for at least one second.
Repeat the above operation to disable the Take A Message feature.

For inquiries, please contact

au Customer Service Center (General Information)
●If you are calling from a landline phone: 0077－7－111 (toll free)
●If you are calling from an au mobile phone: 157 (toll free)